

Assembly and operating manual

PRIODOC

File storage cabinets

AS91...

AS92...

Dear customer,

Thank you for purchasing a high-quality PRIORIT product.

To ensure we can guarantee that the entire system will function free from errors, please carefully observe the following operating manual.

Failure to observe this manual will void any warranty guarantees.

We expressly reserve the right to make technical changes for the purpose of improving our product, or as required by changes to the law – including without any separate notification.

This operating / assembly manual may not be reprinted or duplicated in whole or in part without the written approval of PRIORIT AG.

PRIORIT AG

Tel.: 06181 3640-0, Fax: 06181 3640-210,

E-mail : info@priorit.de , www.priorit.de

Contents

Contents	3
Important notes.....	4
Technical specifications.....	5
General safety information	5
Informal notes.....	5
Intended use.....	5
Functional test, safety check, care and maintenance	6
Transportation	6
For attention	6
Setup conditions	7
Operation.....	9
Additional equipment, accessories.....	10
Intellectual property rights	10
Warranty, transfer declaration	10
Notes	11

Important notes



The product must be installed and fitted flush and level!



When storing the product, do not put loads on the corners and cover the storage area with soft material beforehand, e.g. with a packing blanket!

Technical specifications

Type	AS91	AS92
Outside height	1960 mm	1960 mm
Outside width	575 mm	1065 mm
Outside depth	490 mm	490 mm
Dead weight	315 kg	435 kg
Load capacity of the shelves with evenly distributed load	75 kg	75 kg

General safety information

- Observe the requirement of the fire authorities
- Observe the general building law and the building regulations
- Observe the accident prevention guidelines and the workplace directive
- Only use products that are in proper working order
- Ensure that the required safety checks are carried out by specialist personnel authorised by us
- Impairment of the stability of the cabinet when the door(s) is/are open is to be expected if the cabinet has not yet been bolted to the building structure.
- The swing area of the door must always be kept clear
- Observe all instructions in these operating and maintenance instructions
- The suitability of the screws/dowels must be checked depending on the building

Informal notes

- This operating / assembly manual must always be stored at the location where the enclosure will be used
- Legally required safety information must be posted in an area visible to users
- All safety and hazard notices and the type plate must be kept in legible condition.

Intended use

The products described in these operating manual are manufactured in accordance with the state of the art and the recognised safety regulations,

They may only be:

- used as intended and
- used when they are safe and in good working order

Any other use is not deemed proper use. PRIORIT AG is not liable for the resulting damage and consequential damage.

Functional test, safety check, care and maintenance

The enclosures can be regarded as a safety-related installation.

We recommend that you complete a functional check (visual inspection).

The enclosure should be maintained at least ½ times annually and checked for proper function.

The safety check can only be carried out with the necessary level of care and attention by an employee authorised by us, as sufficient experience and a comprehensive level of knowledge are indispensable for this.

Commonly available, mild household cleaners can be used for external cleaning of the enclosure. The exterior surfaces have a decorative design.

The door locking mechanism must be oiled once per year. The handles can occasionally be lubricated with graphite.

The hinges of the door can be lubricated with graphite.

The enclosures must be protected from water, penetrating moisture or splash water.

The enclosure was deliberately built so that no significant maintenance work is required. If safety-relevant damage is detected, the enclosure must be repaired with original parts before further use.

Transportation

The file and document storage cabinets are shipped fully assembled.



Transport must be carried out in compliance with the safety regulations!



It must generally be carried by at least 2 people.



Transport the cabinet upright and tied up on the transport pallet supplied. Do not loosen the lacing until at the placement site.

If the cabinet needs to be turned over, this may only be done without jerking and over the entire surface of the back or side section. Do not place the cabinet on the door(s)! The cabinet must be locked. Please keep in mind that the cabinet is very heavy. It must generally be carried by at least 2 people.

The enclosures must not be stored outdoors.



Damage must be reported to us in writing without delay.

For attention

- Do not remove the protective film and edge protection corners until immediately at the installation site!

- Pay attention to the enclosed fastening material inside the cabinet.
- Never transport the cabinet with the doors open!
- Note the danger of tipping over during transport!
- Do not remove the edge protectors on the cabinet bottom until after
- Set down from the pallet to prevent damage to the cabinet corners.



- The transport locks in the door joints may only be removed directly at the installation site.

Setup conditions

Inspection on acceptance by recipient

The delivered goods and their packaging must be checked immediately for damage, completeness or other conspicuous features.

If the packaging is damaged then the freight carrier must be notified of this in writing on the delivery slip – a “simple acknowledgement” provided to the delivering freight company will exclude recognition of damage in transit. The same applies if any packages are missing according to the delivery slip.

If you find any damage, please document it immediately (sketch, photo, description etc.) and send it to PRIORIT AG.

Unpacking

Do not use sharp-edged tools for unpacking.

Dispose of the packaging material in an environmentally friendly manner

Setup conditions


The cabinet must be aligned at the final installation site. For this purpose, the cabinet can be aligned with the adjustable feet. The cabinet must then stand horizontally. The door(s) must not be offset from the enclosure. After aligning, check that the door(s) closes (in the case of self-closing, automatically by the pulling force of the door closer) and engages in the striking plates. The door(s) must not rub against the fire protection seals when closing in order to exclude damage and malfunction of the fire protection effect.

The location of the point of use/operation must ensure that the file storage cabinet

- is not exposed to any direct or indirect heat source,
- is protected from moisture,
- is not exposed to an operating temperature below +5°C or above +40°C

Anti-tilt device

Fasten the enclosed angle bracket to the top of the cabinet using the screws 4x 4.5x35 and fasten the cabinet to a suitable wall using suitable dowels.

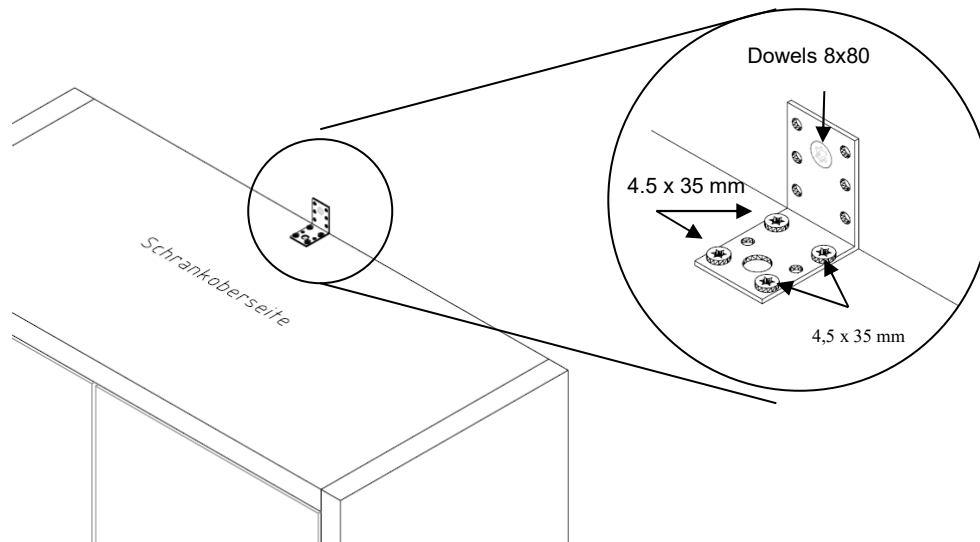

Type plate

The type plate is located on the inside of the moving leaf, where you will find the following data:

- Manufacturer and type designation of the product
- Serial number – specify in all damage reports
- Year of construction
- Usability of the product – flammability according to DIN 4102


Model:

PRIORIT [®] ... designed security	
Typ: AS91/92	Auftrags-Nr.: 456
Serien-Nr.: 123-1	Werk: 1
Baujahr: 2012	
Prüf-Nr.: 2008-B-4645 2008-B-0148/01/02	
Beflammung nach DIN 4102 Teil 2 - geprüft bei MPA Dresden GmbH	
Made in Germany	Bedienungs- / Montageanleitung beachten! PRIORIT AG Tel.: 06181 / 3640-0 Rodenbacher Ch. 6 Fax: 06181 / 3640-210 63457 Hanau www.priorit.com <small>26.02.2012 / 120 / AS91/92 / 2012 / 1</small>



In case of complaints or other damage reports, please state the type designation and serial number!

Operation

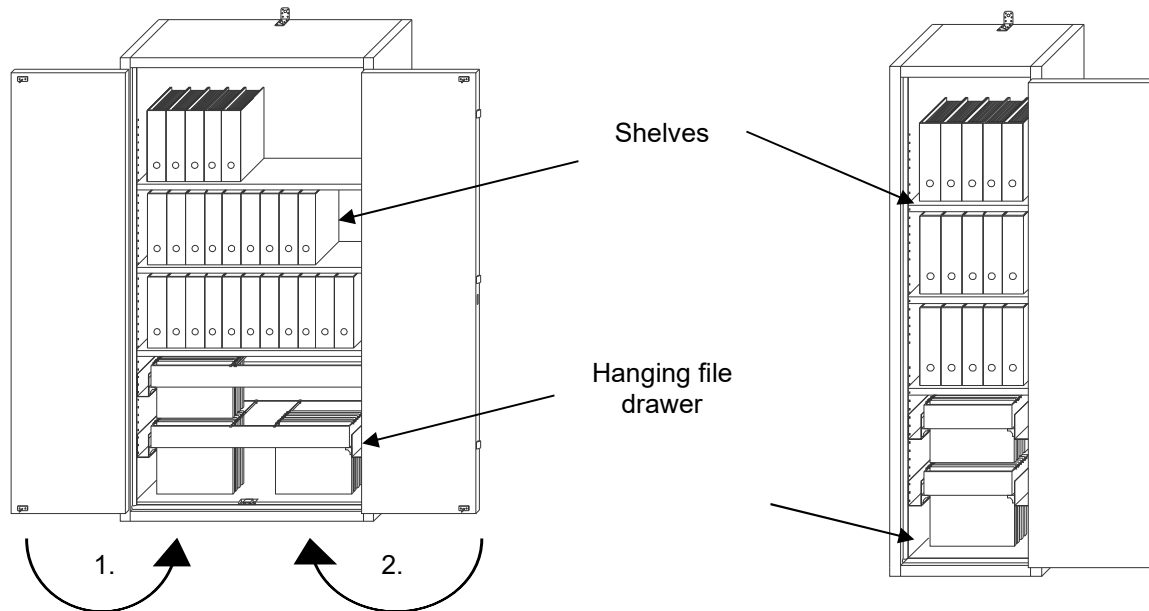

Doors

The doors lock against each other and can be locked by a door lock with DIN half cylinder. Always ensure that the closing sequence - inactive leaf first - is adhered to. When closing, apply slight pressure to the fixed leaf.

The doors can be unhinged by means of the removable pins on the hinges.

Shelves

The height of the shelves can be adjusted in 32 mm increments by repositioning the shelf supports. Make sure that all shelf supports (1 shelf 4 pcs/ 2 shelves 5 pcs) per shelf are always inserted in the holes provided on the same level.

The load capacity of the shelves is 75 kg with a distributed load.

Hanging file drawers

Care should be taken to pull out the hanging file drawers only one at a time and to push them back into the body as far as the end stop so as not to obstruct the closing of the doors or damage the drawers.



When equipping with hanging file drawers, make sure that the cabinet is attached to a suitable wall and secured against tipping over.

Additional equipment, accessories

We offer a wide range of accessories and special equipment. Please contact your specialist dealer

Equipment variants:

- Four shelves, height adjustable in 32 mm increments
- Three shelves, height adjustable in 32 mm increments and two hanging file drawers

Intellectual property rights

In order to protect innovations and the design, utility model specifications have been submitted to the German Patent Office

Warranty, transfer declaration

In order to ensure the optimal function of our products, the assembly instructions must always be observed.

PRIORIT AG's warranty applies to the delivered products. Any modifications or changes to the design are permitted only following prior consultation with PRIORIT AG; otherwise the approval/warranty will be null and void.

The installer/erection technician must provide a guarantee for all assembly work.

Any warranty or liability claims for personal injury or property damage are excluded if they were caused by one or more of the following:

- Enclosures are not used according to their intended purpose
- Improper assembly, commissioning, operation, and maintenance
- Failure to observe the instructions on transportation, storage, operation, and assembly
- Unauthorised structural modifications to the enclosures
- Failure to monitor the safety equipment to be installed
- Improper repairs
- Catastrophes caused by third parties or force majeure

Notes

PRIORIT AG

Tel.: 06181 3640-0, Fax: 06181 3640-210,

E-mail : info@priorit.de , www.priorit.de